


Type CGP10

Instructions for use

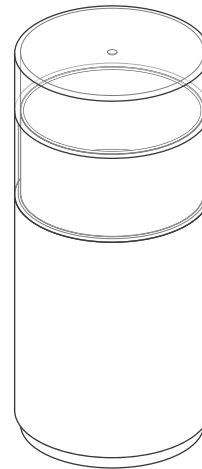

4105101500 - REV.0 04/11/2025


Kenwood Ltd

New Lane
Havant
Hampshire
PO9 2NH






kenwoodworld.com

© Kenwood Ltd 2018










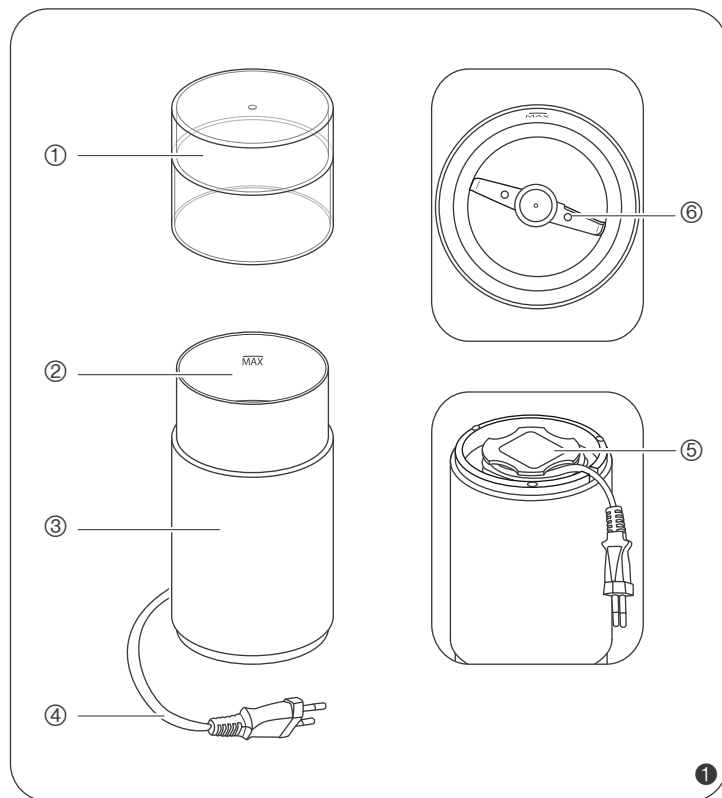



Preliminary operations

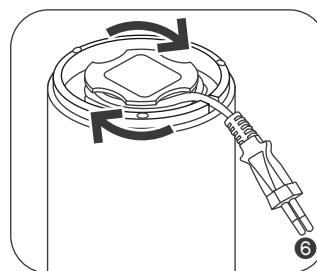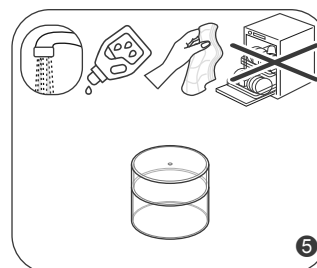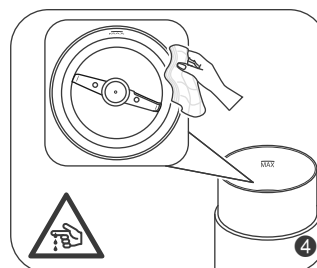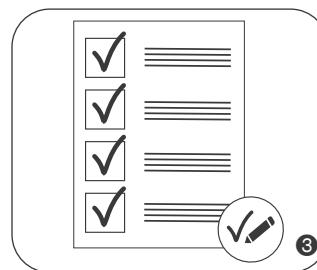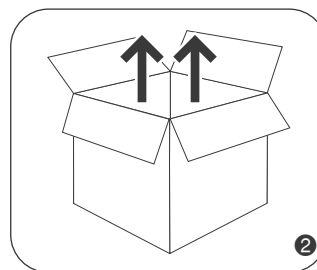







Use

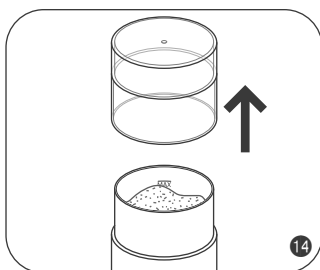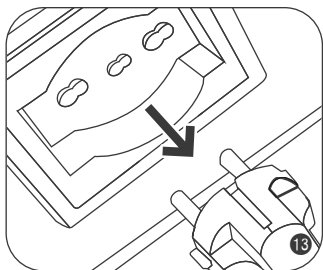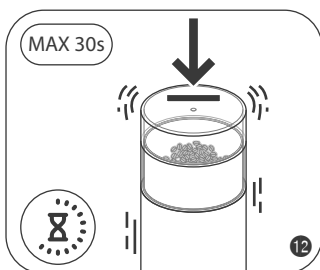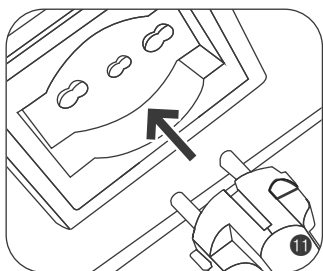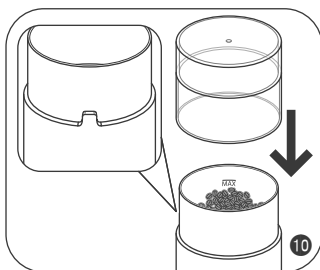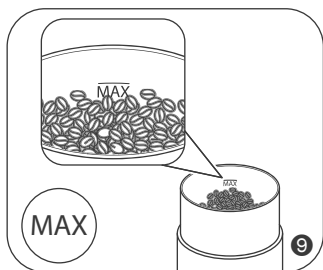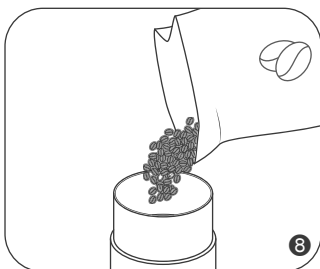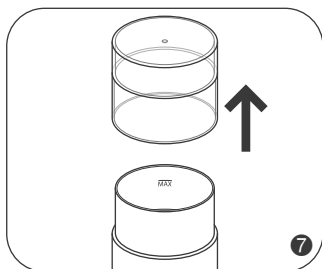

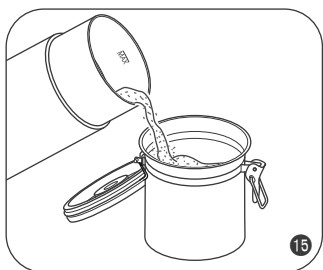

Cleaning and maintenance

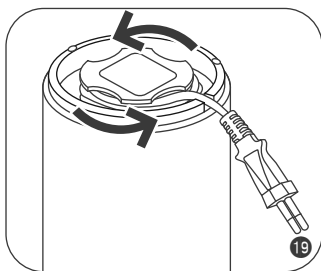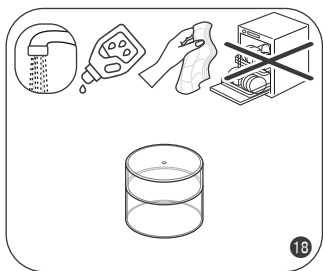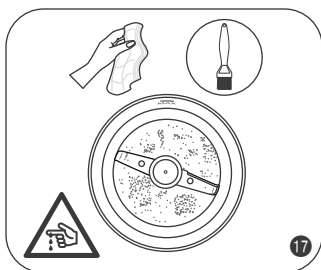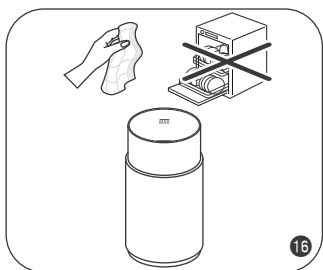

English

Please refer to the first page, where you will find

Safety warnings

Read the instructions carefully before use.

- The appliance has been manufactured in compliance with the specific European Standards in force and all the parts potentially dangerous to the user are protected. Read this manual carefully before use. Use the appliance only for its intended use to avoid possible injury and damage. Keep this manual handy for future reference. Should you decide to give this appliance to other people, remember to include these instructions as well.
- The appliance has been designed to be used for household purposes or similar, such as:
 - in cooking areas reserved for shop staff, offices and other professional environments
 - on farms
 - hotels, motels, bed & breakfasts and other residential facilities (for use by guests).
- Do not use the appliance for purposes other than those described in this manual. The manufacturer declines any responsibility for misuse or for any use other than those specified in this manual. Improper use also results in voiding any form of warranty.
- We suggest keeping the original packaging, as free assistance is not provided for failures resulting from inadequate packaging of the product at the time of shipping to an authorized Service Centre.

- In order not to compromise the safety of the appliance, use only original spare parts and accessories authorized by the manufacturer.
- The appliance complies with the Regulation (EC) No. 1935/2004 of 27/10/2004 concerning the materials intended to come into contact with food products.
- Do not leave the packaging near children as it is a potential source of danger.
- The appliance can be used by people who have reduced physical, sensory or mental capacities, or with lack of experience or knowledge, only if they are supervised by a responsible person or if they have received and understood the instructions and dangers existing during use of the appliance.
- This appliance must not be used by children. Keep the appliance and its cable out of the reach of children.
- Children shall not play with the appliance.
- Do not let the power cord hang in a place where it could be grasped by a child.
- If you decide to dispose of this appliance as waste, it is recommended to make it inoperative by cutting the power cord. It is also recommended that all potentially dangerous components of the appliance, especially for children who could use the appliance as a game, are rendered harmless.
- Before connecting the appliance to the power supply, check that the voltage shown on the identification plate under the appliance matches the local voltage supply.

- The use of extension cords not authorized by the Manufacturer of the appliance can lead to damages and accidents.
- Do not connect any other high-power equipment (such as stoves, irons, radiators) to the same power outlet. Danger of electric overload.
- Do not leave the appliance unattended while connected to the power supply.
- Do not put live parts in contact with water: risk of short circuit and/or electric shock.
- Never immerse the appliance, plug or power cord in water or other liquids.
- Do not use the appliance if your hands are wet or if you are barefoot.
- Do not leave the power cord against sharp parts or sharp edges.
- The power cord shall not touch hot surfaces.
- Never pull the power cord or the appliance to disconnect the plug from the power outlet.
- If not in use, always unplug the power cord from the power outlet.
- Do not place the appliance on very hot surfaces or near open flames to prevent the coating from being damaged.
- Do not place the appliance near flammable materials (such as fabrics, curtains).
- Do not place the appliance near or on damp surfaces (such as a sink).
- The appliance must not be powered by external timers or separate remote-controlled systems.
- Do not use the appliance outdoors.
- The appliance shall be used and left at rest on a stable surface.

- Do not leave the appliance exposed to weathering (such as rain or sun).
- Place the appliance in an environment that is sufficiently lit, clean and where the power outlet is easily accessible.
- In order to lift the appliance, hold it by the body.
- The appliance must not be used if it has been dropped or if there are visible signs of damage. Do not use the appliance if the power cord or plug are damaged or if the appliance is faulty. All repairs, including the power cord replacement, shall be carried out only by authorized Service Centre or technicians, in order to prevent any risk.
- **Always keep these instructions for future reference.**

 Safety warnings during use

- Fully unwind the power cord before use.
- Check for foreign objects inside the coffee bean container before use.
- Never insert into the coffee beans container substances other than coffee beans.
- Never add liquids inside the coffee beans container.
- Do not use the appliance to grind very hard ingredients that are rich in oil (peanuts, rice, eggshells).
- Do not use the appliance to grind sugar and salt.
- Do not use the appliance to grind unroasted coffee beans.
- Do not use the appliance to grind spices.

- Do not place too many coffee beans into the coffee beans container. Do not exceed the MAX level.
- Never use the appliance if the blade is damaged.
- Do not operate the appliance when it is empty.
- Place the lid on the motor body correctly before starting the appliance.
- Only switch on the appliance when it is in vertical position.
- Do not use the appliance for more than 30 consecutive seconds.
- The blades are sharp. Always keep your hands away from the blades.
- Do not remove the lid while using the appliance.
- Before removing the lid, wait until the blade has completely stopped and unplug the power cord from the power outlet.

Identification data

The following identification data of the appliance are reported on the data plate under the base of the appliance:

- manufacturer and CE marking
- model (Mod.)
- serial number (SN)
- power supply voltage (V) and frequency (Hz)
- electrical power consumption (W)
- assistance toll-free phone number

For any requests to the Authorized Service Centres, specify model and serial number.

Description of the appliance

The appliance can be used to grind toasted coffee beans.

- ① Lid
- ② Coffee beans container
- ③ Motor body
- ④ Power cord
- ⑤ Cord storage device
- ⑥ Blades

Important

- The appliance is equipped with a device that blocks the functioning if the lid is not correctly inserted in the motor body.

To prepare the appliance for use, see the pictures in the “Preliminary operations” sequence.

See the pictures in the “Instructions for use” sequence to use the appliance.

 Safety warnings during cleaning and maintenance

- Regular and daily cleaning maintains the appliance efficient and extends the life of the appliance.
- Cleaning and maintenance operations shall be carried out when the appliance is off and unplugged from the power outlet.
- Never use solvents that damage plastic parts. Do not use potentially abrasive products.
- Do not pour water into the coffee bean container to clean it.
- Do not wash the appliance and the lid in the dishwasher.
- The blades are sharp. Unplug the power cord from the power outlet before assembling or disassembling individual parts or before cleaning the appliance.

See the pictures in the "Cleaning and maintenance" sequence for the cleaning and maintenance of the appliance.

Use a slightly damp cloth to clean the motor body ③, lid ①, and coffee bean container ②.

Use a soft brush to remove any coffee residue from the coffee bean container.

Service and customer care

- If you experience any problems with the operation of your appliance, before requesting assistance visit www.kenwoodworld.com.
- Please note that your product is covered by a warranty, which complies with all legal provisions concerning any existing warranty and consumer rights in the country where the product was purchased.
- If your Kenwood product malfunctions or you find any defects, please send it or bring it to an authorised KENWOOD Service Centre. To find up-to-date details of your nearest authorised KENWOOD Service centre, visit www.kenwoodworld.com or the website specific to your Country.



IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH THE EUROPEAN DIRECTIVE ON WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT (WEEE)

At the end of its working life, the product shall not be disposed of as urban waste.

It shall be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.