 


Type IFP17

instructions

 
 
 
 
 
 
 
 
 
 
 
Cod. 3055103300 Rev. 0 - 09/02/2026

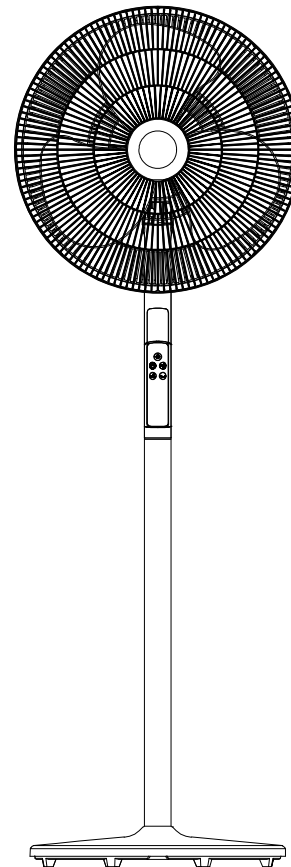

Kenwood Ltd

New Lane
Havant
Hampshire
PO9 2NH
kenwoodworld.com



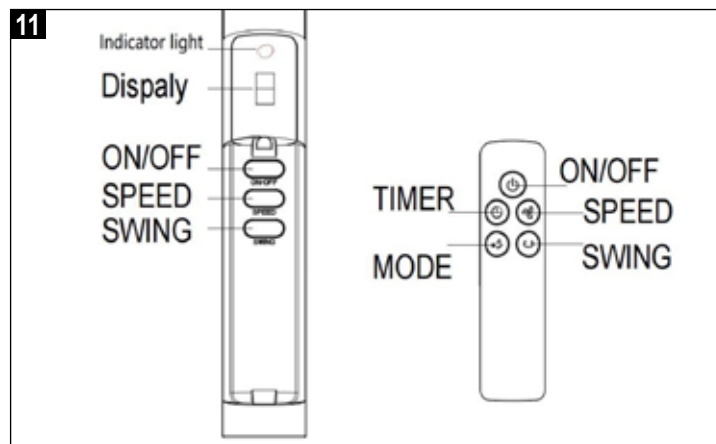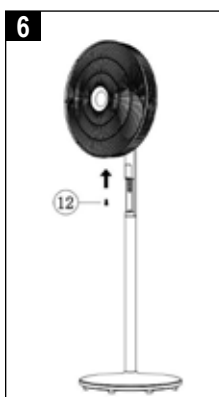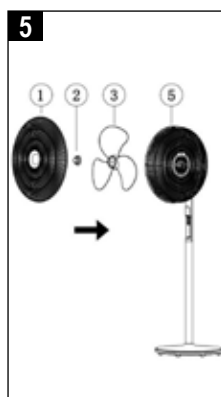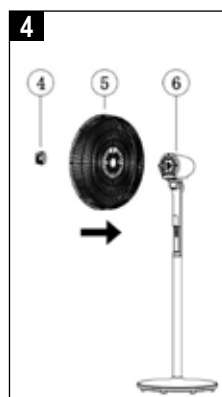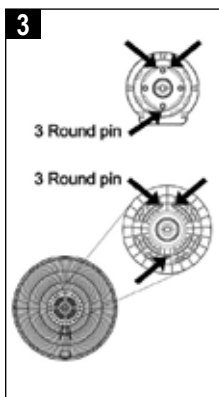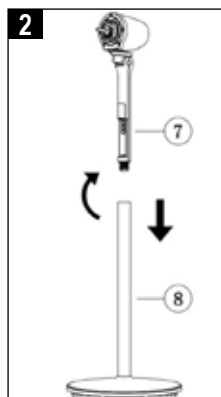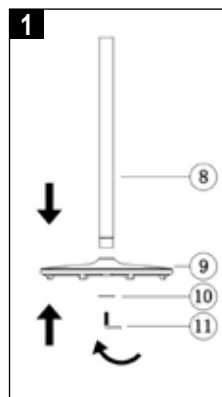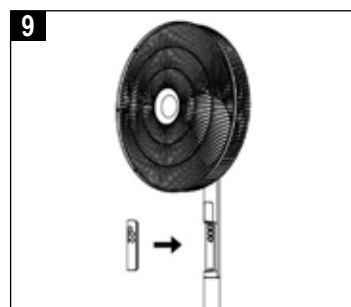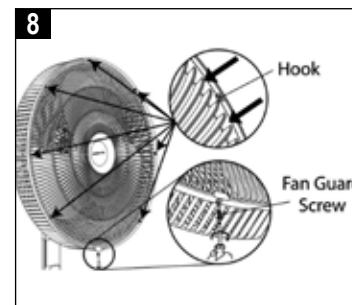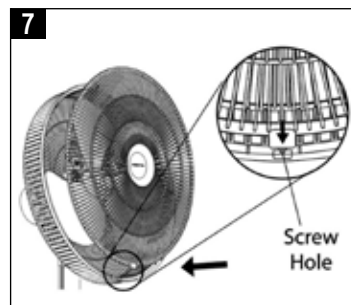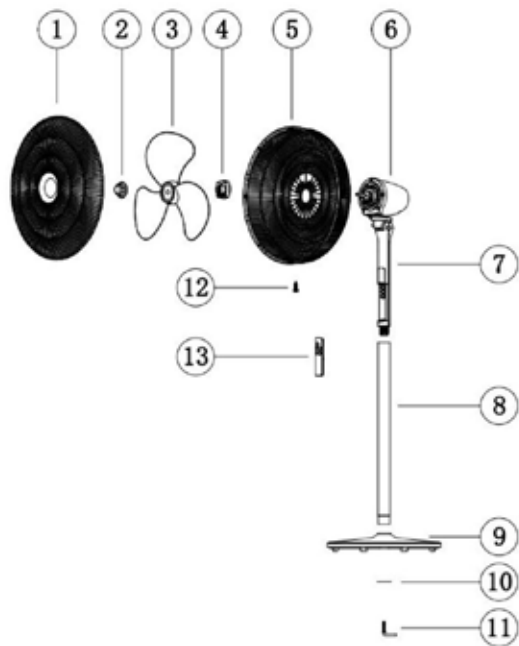

English

safety

- Read these instructions carefully and retain for future reference.
- Remove all packaging and any labels.
- If the plug or cord is damaged it must, for safety reasons, be replaced by KENWOOD or an authorised KENWOOD repairer in order to avoid a hazard.
- Make sure that the voltage on the appliance rating plate corresponds to that of the mains electricity.
- Never leave the appliance unattended when connected to the power supply; unplug it after every use.
- Never place the appliance on or close to sources of heat.
- Always place the appliance on a flat, level surface during use.
- Never leave the appliance exposed to the elements (rain, sun, etc....).
- Make sure that the power cord does not come into contact with hot surfaces.
- This appliance must not be used by people (including children) with reduced physical or mental capabilities or by people without the relevant experience or knowledge of the appliance, unless they are carefully supervised or properly trained in its use by a person responsible for their safety.
- Make sure that children cannot play with the appliance.
- Never place the appliance body, plug or power cord in water or other liquids; always wipe clean with a damp cloth.

- Always unplug the power cord from the electricity mains before fitting or removing single attachments or before cleaning the appliance.
- Always make sure that your hands are thoroughly dry before using or adjusting the switches on the appliance, or before touching the power plug or power connections.
- When air cooler is working, absolutely forbid hand or foreign body inserting the network (specially pay attention to children)
- To unplug the appliance, grip the plug and remove it directly from the power socket. Never pull the power cord to unplug the appliance.
- Do not use the appliance if the power cord or plug are damaged or if the appliance itself is faulty; all repairs, including substitution of power cord, must be carried out exclusively by an assistance centre or by authorized technicians in order to avoid all risks.
- In case of using extension leads, these must be suitable for the appliance power to avoid danger to the operator and for the safety of the environment in which the appliance is being used. Extension leads, if not suitable, can cause operating anomalies.
- Never allow the cord to dangle in places where it may be grabbed by a child.
- Do not threaten the safety of the appliance by using parts that are not original or which have not been approved by the manufacturer.
- This appliance is designed for HOME USE ONLY and may not be used for commercial or industrial purposes.
- Any changes to this product that have not been

expressly authorised by the manufacturer may lead to the user's guarantee being rendered null and void.

- In the event that you decide to dispose of the appliance, we advise you to make it inoperative by cutting off the power cord. We also recommend that any parts that could be dangerous be rendered harmless, especially for children, who may play with the appliance or its parts.
- Packaging must never be left within the reach of children since it is potentially dangerous.
- Never immerse the appliance in liquids or spray it, do not use it in proximity of windows or other places exposed to rain to prevent the risk of electric shock.
- Do not start the appliance close to combustible or flammable materials or in proximity of emissions.
- Keep the appliance away from curtains, drapes, or other light objects that might be sucked in.
- Never put fingers or other objects into the grid, especially when the appliance is running.
- Do not start the fan using a timer or other control devices, to prevent the risk of fire or electrocution.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.

key

1. Front grill
2. Spinner
3. Blade
4. Plastic nut
5. Rear grill
6. Motor housing
7. Control box
8. Tube
9. Base cover
10. Pad
11. 7-shape bolt
12. Screw
13. Remote control

assembly step

1. Put tube (8) with base cover (9), then use pad (10) and 7-shape bolt (11) to lock the base cover (9); turn clockwise to tighten (Fig. 1).
2. Use tube (8) to control box (7) to lock. Turn clockwise to tighten (Fig. 2).
3. Unscrew the plastic nut (4) on the motor counterclockwise, position the rear grill (5) onto the motor housing (6). Insert the plastic nut (4) and turn it clockwise to lock the rear grill (5) into position (Fig. 3).
4. Slide the blade (3) onto the motor housing (6), making sure the motor housing is fully seated into the blade groove (Fig. 4). Screw the spinner (2) anticlockwise to tighten the blade to the motor housing (Fig. 5).
5. Cover the front grill (1) on the rear grill (5) (Fig. 5).
6. Finally, secure the front grill (1) in the designated position with screw (12) (Fig. 6).

assembly grill (Fig. 7-8)

Remove the fan guard screw (12) from the front guard (1). Hold the front guard (1) with logo in an upright position.

Fix the front guard (1) and the rear guard (5) by aligning the screw hole below the front guard (1) and the rear guard (5). Then, press the front guard (1) toward the rear guard (5) until all the 7-hooks completely clipped to the front guard (1). Finally, tighten the fan guard screw (12) to the screw hole to lock the front guard (1) and the rear guard (5).

placing the remote control

- Align the remote control with the button position on the control box (Fig. 9).
- When the remote control is close to the control box, it will suck on the remote control (Fig. 10).

operation using control panel (Fig. 11)

For your convenience, the fan can be operated from the control panel at the front of the unit, or with the remote control. The buttons on the control panel operate the same functions as the remote control, except for setting the timer from the control panel, which is slightly different and explained in the instructions below.

When using the remote control, point it towards the LED display at the front of the fan and ensure that nothing is obstructing the path of the signal.

Handle the remote control carefully; do not drop or throw it.

Operation:

1. Remove all the cable tie and plastic bags before plug to the mains.
2. Connect the plug to the mains.
3. Speed selection.

Setting the tilt angle

Press down or raise up the motor housing (6), move the fan to the desired angle.

Using the fan

1. Place the fully assembled pedestal fan on a dry, level and stable surface, taking into consideration all relevant safety advice from the previous pages.
2. Insert the plug into an appropriate electrical socket and switch on power at the outlet. The fan will emit one short beep sounds and the indicator light will illuminate green.
3. Press the ON/OFF button to start or turn off the fan.
4. Press the SPEED button to select one of the available fan speeds.

The display will show "1-9".

5. Press the SWING button to start oscillation for widespread air distribution. Press the button once more to stop oscillation.
6. Press the TIMER button to turn on or off the timing function, which can be set for 0-9 hours.
7. Press the MODE button to set the desired operating mode: Normal, Natural, or Sleep.
Normal: Normal mode operates normally with speed.
Natural: Natural mode speed will random adjustment.
Sleep: Sleep mode will reduce speed gradually.
On the display, the light turns red in natural mode, green in normal mode, and the light goes out in sleep mode. In sleep mode, all display lights go out within 10 seconds.
8. Switch off the fan after use and unplug the fan after use.

ATTENTION:

Remote control operations are identical to the functions on the fan control panel.

Remote control battery compartment

- Ensure batteries are inserted in the correct direction.
- Do not mix battery types.
- When replacing, ensure both batteries are changed simultaneously.
- 2xAAA size batteries are required
- The batteries after used should not be throwing away, it will be reclaimed.

care and cleaning

- Clean the outside of the appliance using a clean, damp cloth.
- Do not use solvents, abrasive cleaners, metal brushes or other cutting objects for cleaning.
- The cooling blades on the motor unit must be always free from dust. Remove dust with a vacuum cleaner, if necessary.

ATTENTION:

Wait until the blades are completely stopped before proceeding with cleaning.

Don't wipe it with acid detergents, lamp oil, alcohol or cloth impregnated with chemicals to prevent any change in colour or damages.

Always unplug the fan before cleaning.

service and customer care

- If the cord is damaged it must, for safety reasons, be replaced by KENWOOD or an authorized KENWOOD repairer.
- If you experience any problems with the operation of your appliance, before requesting assistance refer to the "troubleshooting guide" section in the manual or visit www.kenwoodworld.com.
- Please note that your product is covered by a warranty, which complies with all legal provisions concerning any existing warranty and consumer rights in the country where the product was purchased.
- If your Kenwood product malfunctions or you find any defects, please send it or bring it to an authorised KENWOOD Service Centre. To find up to date details of your nearest authorized KENWOOD Service centre visit www.kenwoodworld.com or the website specific to your Country.



**IMPORTANT INFORMATION FOR
CORRECT DISPOSAL OF THE
PRODUCT IN ACCORDANCE
WITH THE EUROPEAN
DIRECTIVE ON WASTE
ELECTRICAL AND ELECTRONIC
EQUIPMENT (WEEE)**

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.