

 
KENWOOD

Type IFP46

Instructions for use

English

3 - 7

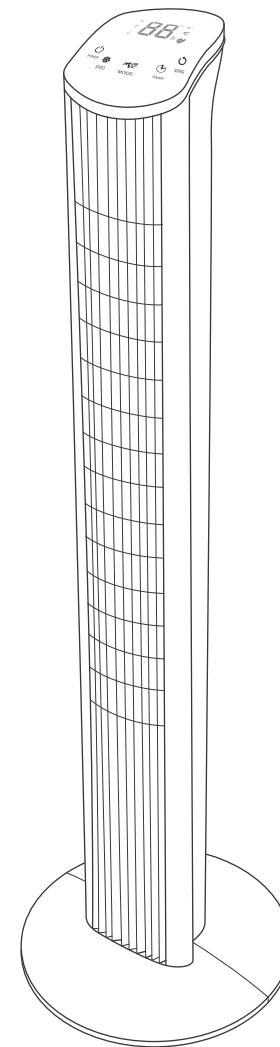

3025102500 - REV.0 31/07/2025

 
 


Kenwood Ltd










New Lane
Havant
Hampshire
PO9 2NH

kenwoodworld.com

© Kenwood Ltd 2018








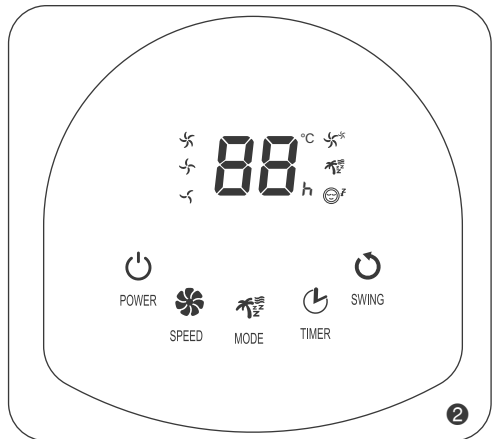
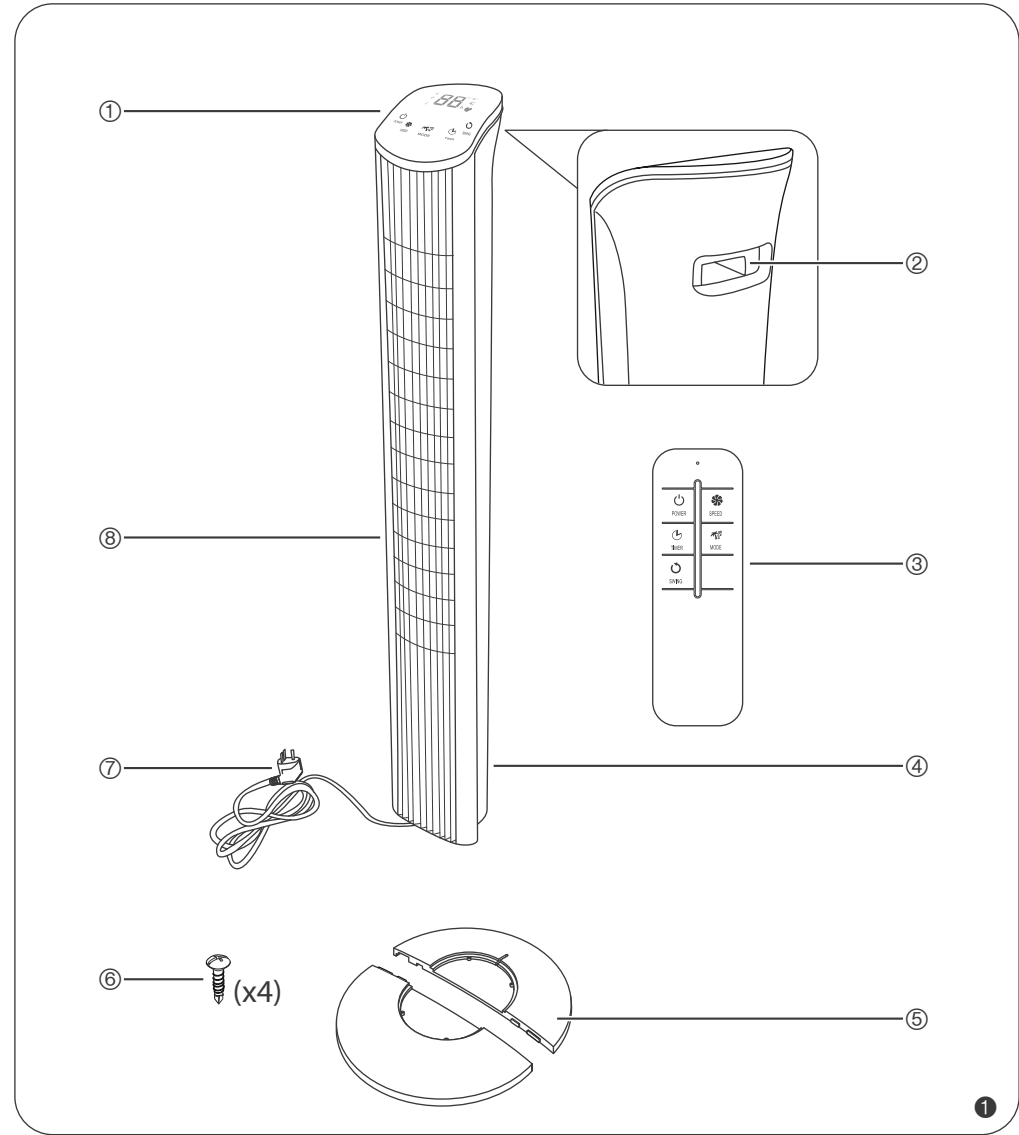





Preliminary operations

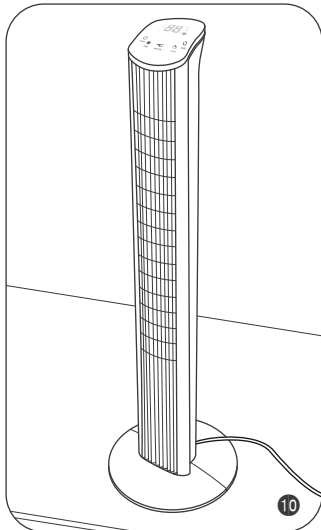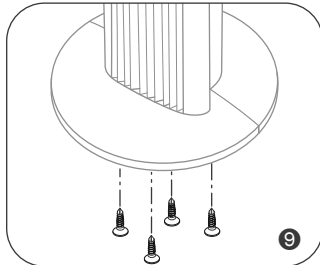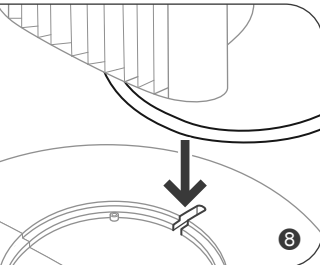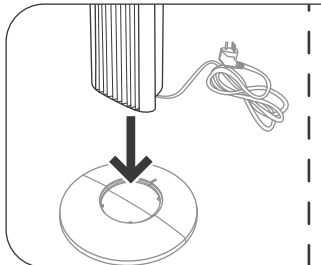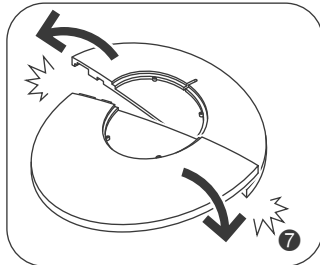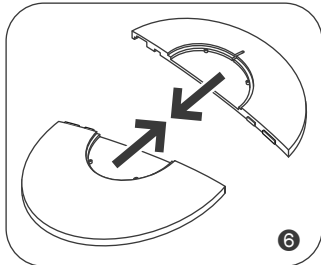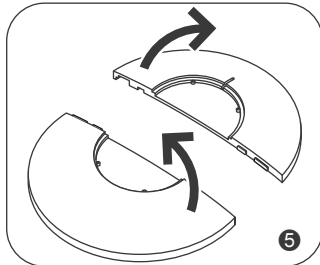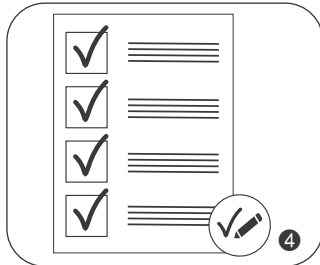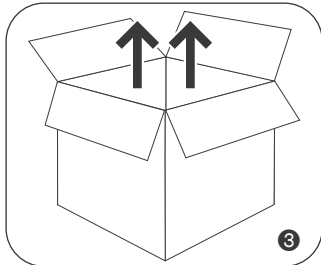         





Use

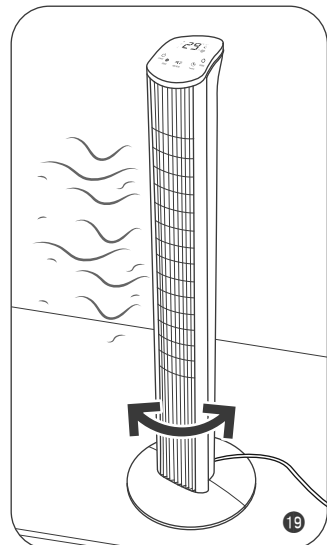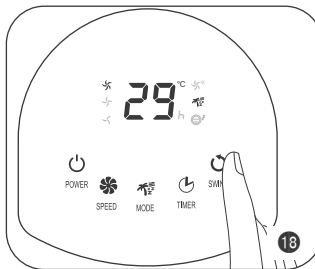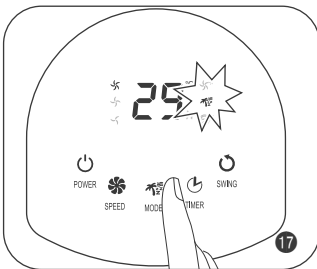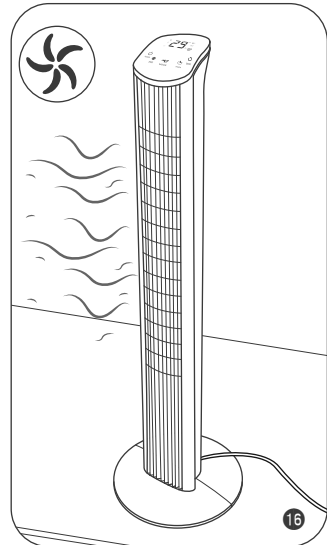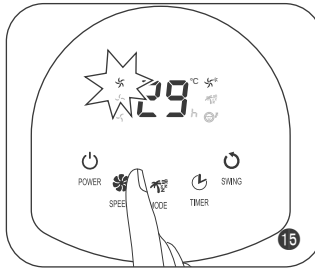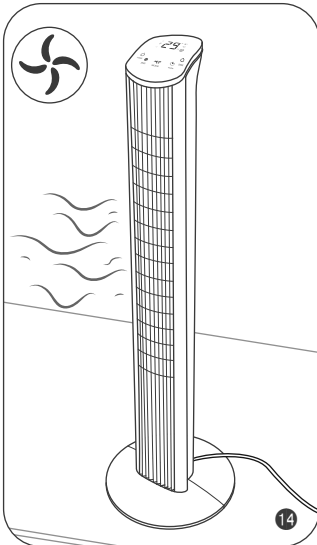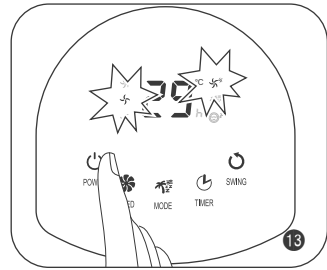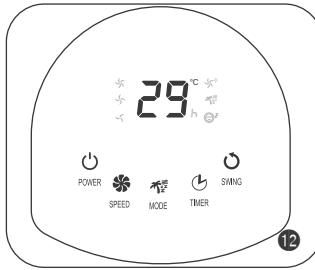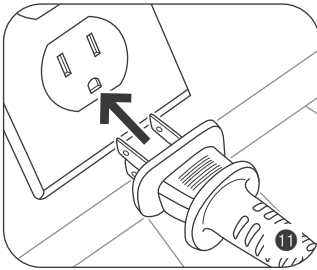         

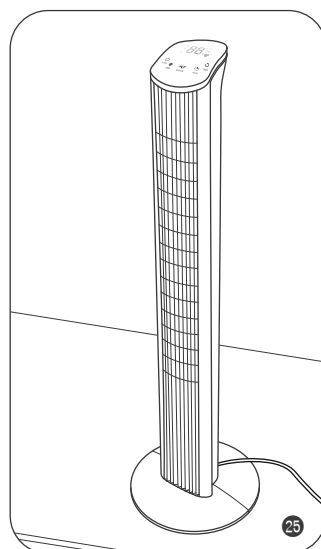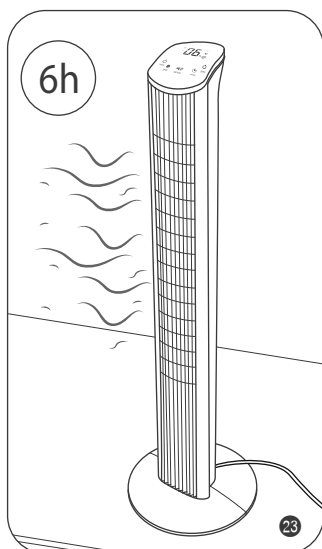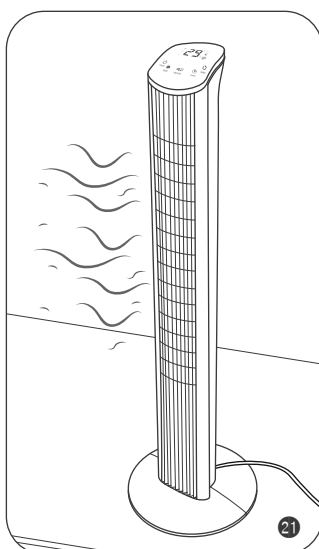   



Cleaning and maintenance

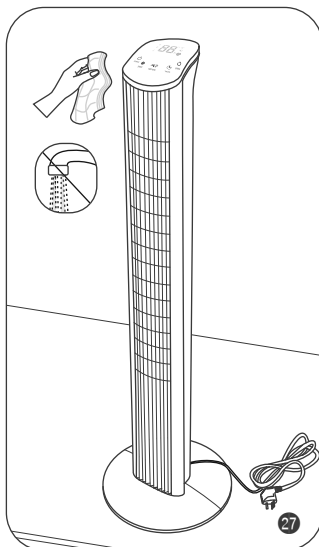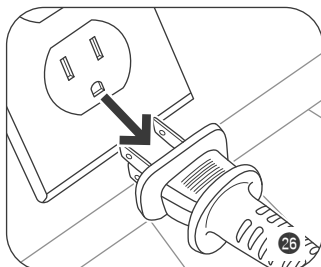  

English

Please refer to the first page, where you will find illustrations

Safety warnings

Read the instructions carefully before use.

- The appliance has been manufactured in compliance with the specific European Standards in force and all the parts potentially dangerous to the user are protected. Read this manual carefully before use. Use the appliance only for its intended use to avoid possible injury and damage. Keep this manual handy for future reference. Should you decide to give this appliance to other people, remember to include these instructions as well.
- The appliance has been designed to be used for household purposes or similar, such as:
 - in cooking areas reserved for shop staff, offices and other professional environments
 - on farms
 - hotels, motels, bed & breakfasts and other residential facilities (for use by guests).
- Do not use the appliance for purposes other than those described in this manual. The manufacturer declines any responsibility for misuse or for any use other than those specified in this manual. Improper use also results in voiding any form of warranty.
- We suggest keeping the original packaging, as free assistance is not provided for failures resulting from inadequate packaging of the product at the time of shipping to an authorized Service Centre.
- In order not to compromise the safety of the appliance, use only original spare parts and attachments authorized by the Manufacturer.
- Do not leave the packaging near children as it is a potential source of danger.
- The appliance can be used by children over 8 years of age and by people with reduced physical, sensory or mental capacities, or who lack experience or knowledge, only if they are supervised by a responsible person or if they have received and understood the instructions and the existing dangers when using the appliance.
- Children shall not play with the appliance.
- Cleaning and maintenance by the user shall not be carried out by children unless they are older than 8 years and are supervised during the operation.
- Always keep the appliance and the power cord out of the reach of children under the age of 8.
- Do not let the power cord hang in a place where it could be grasped by a child.

- If you decide to dispose of this appliance as waste, it is recommended to make it inoperative by cutting the power cord. It is also recommended that all potentially dangerous components of the appliance, especially for children who could use the appliance as a game, are rendered harmless.
- Before connecting the appliance to the power supply, check that the voltage shown on the identification plate under the appliance matches the local voltage supply.
- The use of extension cords not authorized by the Manufacturer of the appliance can lead to damages and accidents.
- Always connect the appliance to an earthed socket.
- Do not connect any other high-power equipment (such as stoves, irons, radiators) to the same power outlet. Danger of electric overload.
- Do not leave the appliance unattended while connected to the power supply.
- Never put live parts in contact with water: risk of short circuit and/or electric shock.
- Never immerse the appliance, plug or power cord in water or other liquids.
- Do not use the appliance if your hands are wet or if you are barefoot.
- Do not leave the power cord against sharp parts or sharp edges.
- The power cord shall not touch hot surfaces.
- Never pull the power cord or the appliance to disconnect the plug from the power outlet.
- If the appliance is left unused, also for a short period of time, turn it off and always unplug the power cord from the power outlet.
- The appliance shall be used and left at rest on a stable surface.
- Do not place the appliance on very hot surfaces or near open flames to prevent the coating from being damaged.
- Do not place the appliance or the power cord near or over hot electric or gas stoves, or near a microwave oven.
- Fully unwind the power cord before use.
- The appliance must not be powered by external timers or separate remote-controlled systems.
- Do not use the appliance outdoors.
- Do not leave the appliance exposed to weathering (such as rain or sun).
- In order to lift the appliance, hold it by the body.
- Place the appliance in an environment that is sufficiently lit, clean and where the power outlet is easily accessible.

- The appliance must not be used if it has been dropped or if there are visible signs of damage. Do not use the appliance if the power cord or plug are damaged or if the appliance is faulty. All repairs, including the power cord replacement, shall be carried out only by authorized Service Centre or technicians, in order to prevent any risk.
- **Always keep these instructions for future reference.**

 Safety warnings during use

- Before turning the appliance on, make sure the components are correctly installed.
- Assembling and disassembling operations shall be carried out when the appliance is off and unplugged from the power outlet.
- Do not place the appliance near or on damp surfaces (such as a sink).
- Do not use the appliance in environments with temperatures above 40 °C.
- Do not use the appliance in closed environments and in the presence of fumes given off by oil-based paints, solvents or waterproofing agents, or by flammable power or other toxic or explosive fumes.
- Keep the air outlet grid and the air intake free from dust, lint, hair, etc.
- Keep hair, loose clothing or other parts that can get trapped away from the moving parts of the appliance.
- Do not insert objects through the air outlet grid.
-  Do not cover the appliance during operation.
- Before moving the appliance, make sure it is turned off and unplugged from the power outlet.
- Remove the batteries from the remote control if it is not going to be used for a long period of time.
- After use, turn off the appliance and unplug the power supply unit from the power outlet.

Description of the appliance ①

The device must be used to ventilate rooms.

This appliance must not be used for commercial and industrial purposes.

Any other use of the appliance is not intended by the Manufacturer, which is exempt from any liability for damages of any kind, generated by improper use of the appliance.

- | | |
|-------------------------|---|
| ① Display | ⑤ Base |
| ② Remote control seat | ⑥ Fixing screws for the support base (x4) |
| ③ Remote control | ⑦ Power cord |
| ④ Body of the appliance | ⑧ Air outlet grid |

Description of buttons on the display and remote control

Symbol	Button	Description
 SPEED	SPEED button	Allows the user to set the fan speed of the appliance.
 MODE	MODE button	Allows the user to set the operating modes of the appliance.
 POWER	ON/OFF button	Allows the user to turn on or off the appliance.
 TIMER	TIMER button	Allows the user to set the operating time of the appliance.
 SWING	SWING button	Allows the user to activate or deactivate the oscillation of the device.

Identification data

The following identification data of the appliance are reported on the data plate under the base of the appliance:

- manufacturer and CE marking
- model [Mod.]
- serial number [SN]
- power supply voltage [V] and frequency [Hz]
- electrical power consumption [W]
- assistance toll-free phone number

In any requests to authorized Service Centres, specify model and serial number.

How to use the appliance

To prepare the appliance for use, see the pictures in the "Preliminary operations" sequence.

See the pictures in the "Instructions for use" sequence to use the appliance.

The appliance can be operated via the display or remote control.

When the appliance is connected to the power outlet, the display shows the current room temperature.

Press the ON/OFF button to turn on the appliance. The default fan speed is medium.

Press the SPEED button  to set the desired fan speed. The appliance has multiple fan speeds:

- Low fan speed ()
- Medium fan speed ()
- Maximum fan speed ()

The selected fan speed is shown on the display.

Press the MODE button  to set the appliance in:

- Standard mode ()
- Natural mode ()
- Sleep ()

The selected mode is shown on the display.

Appliance oscillation

The appliance oscillation can be activated.

The appliance oscillation allows the air flow to be distributed more evenly throughout the room, preventing the air jet from concentrating in a single point.

- To activate the appliance oscillation, press the OSCILLATION button () . The appliance will start rotating to the right and left. The icon of the button lights up.
- To stop the appliance oscillation, press the OSCILLATION button again () .

How to set the timer

This appliance has a timer.

Press the TIMER button () to set the desired auto-off time. The timer can be set from 1 hour up to 12 hours. Each time the TIMER button is pressed, the operating time of the appliance increases by 1 hour.

The appliance will automatically turn off when the set time expires.

Using the remote control

The appliance has a remote control.

The remote control operates using 1.5V AAA alkaline batteries. The buttons on the remote control perform the same functions as the buttons on the display.

The remote control can be stored in its seat ② located on the back of the appliance.

Safety warnings during cleaning and maintenance

- Regular and daily cleaning maintains the appliance efficient and extends the life of the appliance.
- Cleaning and maintenance operations shall be carried out when the appliance is off and unplugged from the power outlet.
- Unplug the appliance from the power outlet before carrying out any cleaning and maintenance operations.
- Do not use abrasive cleansers or metal tools to avoid scratching and damaging the coating. Never use solvents that damage plastic parts.
- Do not disassemble the appliance. There are no internal parts to be cleaned.

See the pictures in the "Cleaning and maintenance" sequence for the cleaning and maintenance of the appliance.

Cleaning the appliance

- Clean the fixed parts of the appliance using a non-abrasive damp cloth to prevent damaging the coating. Dry using a dry cloth.

Service and customer care

- If you experience any problems with the operation of your appliance, before requesting assistance visit www.kenwoodworld.com.
- Please note that your product is covered by a warranty, which complies with all legal provisions concerning any existing warranty and consumer rights in the country where the product was purchased.
- If your Kenwood product malfunctions or you find any defects, please send it or bring it to an authorised KENWOOD Service Centre. To find up-to-date details of your nearest authorised KENWOOD Service centre, visit www.kenwoodworld.com or the website specific to your Country.



IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH THE EUROPEAN DIRECTIVE ON WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT (WEEE)

At the end of its working life, the product shall not be disposed of as urban waste.

It shall be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.